 


ONESONIC

QUATTRO

USER MANUAL

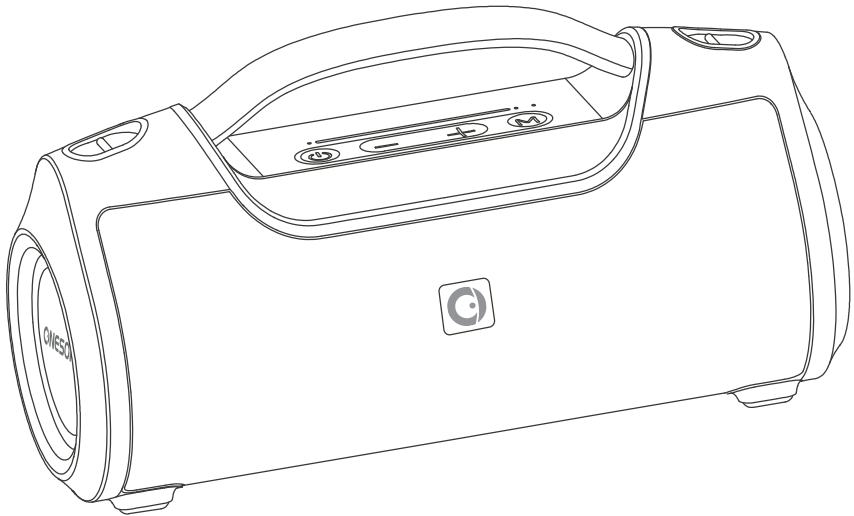


RoHS CE FCC




MADE IN CHINA

BLUETOOTH SPEAKER AND ACCESSORIES


- A. Bluetooth speaker
- B. USB-C Charging cable
- C. 3.5mm AUX cable
- D. User manual

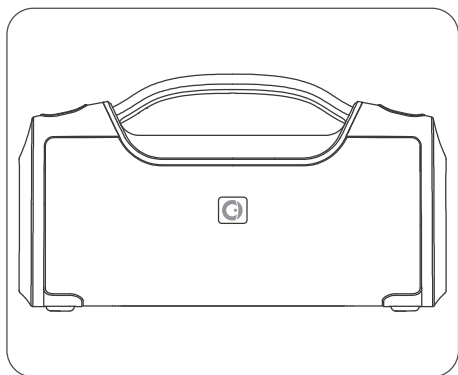


A

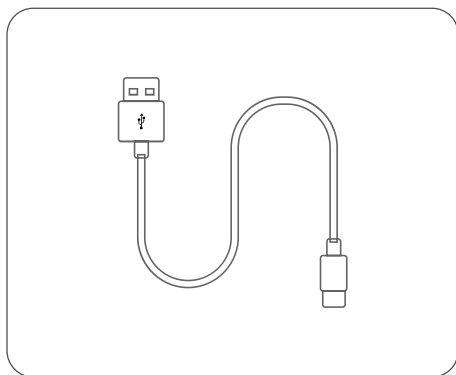

B

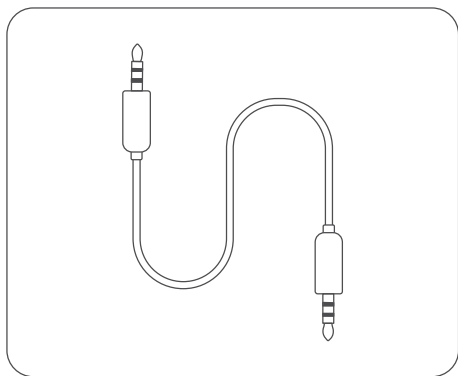


C

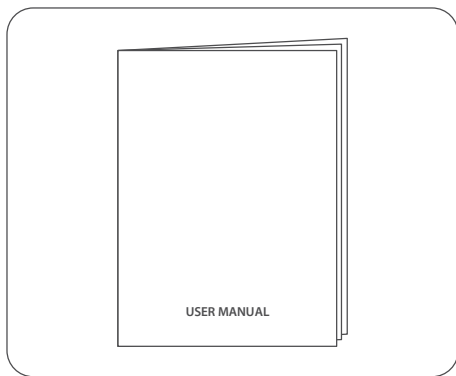

D


BASIC FUNCTIONS

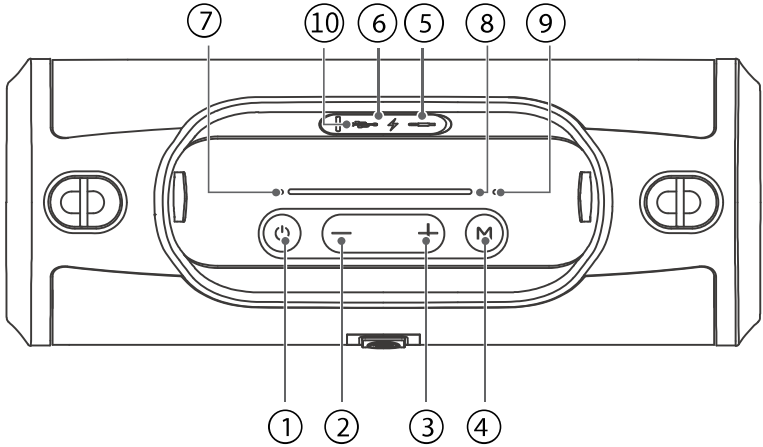


- ① Power on/off/ Play/ Pause/BT
- ② Volume –
(Long press for previous song)
- ③ Volume +
(long press for next song)
- ④ M Button (MODE/TWS/EQ Switch)
- ⑤ AUX audio input port
- ⑥ USB-C charging port
- ⑦ Blue: Bluetooth indicator light
Green: AUX indicator light
White: USB indicator light
Red: Charging indicator light
- ⑧ White: TWS indicator light
- ⑨ Microphone
- ⑩ USB-A port / U Disk port
(support USB,5V/2A output)



OPERATION GUIDE

1. Power on/off



Long press power button "  " for 2-3 seconds to power on/off.

2. Bluetooth Connection

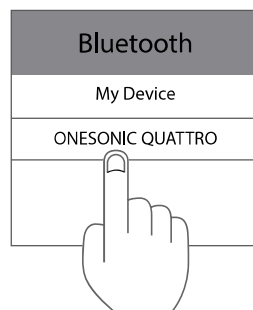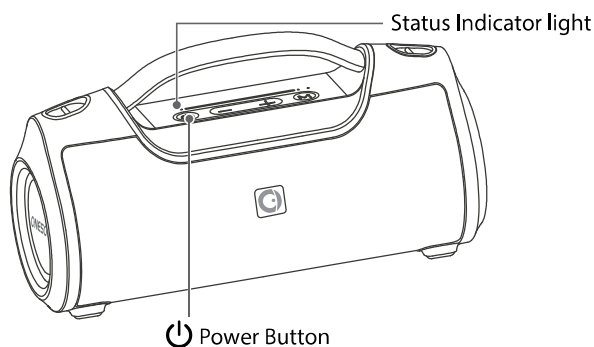
 
QUATTRO will enter to Bluetooth mode after powering on, and the blue indicator light will flash. Then choose " QUATTRO " from devices list. A voice prompt alerts you that power is on, and the LED Indicator light will remain BLUE. You can now start to play your music. Double press "  " quickly to disconnect Bluetooth connection.





3. Volume control

Short press "  " to increase volume, short press "  " to decrease volume; when the volume is at a maximum, you will hear a "Beep" sound.


- Track Selection:

Long press "  " for 2 seconds to play next song, long press "  " for 2 seconds to play previous song.

- Operation on playing status:

Short press "  " to pause playing, press again to start playing on Bluetooth mode; Short press "  " to mute, press again to un-mute on Aux mode.

- EQ switch:


Default standard sound effect. Double press "  " to switch EQ, Standard → Outdoor → 3D sound effect. The Bluetooth indicator light will flash when switch EQ on Bluetooth mode. The AUX indicator light will flash when switch EQ on Aux mode. USB indicator light will flash when switch EQ on USB mode.

OPERATIONS GUIDE

- MODE switch: Default Bluetooth Mode. Short press “ M ” to switch Mode, Bluetooth→Aux→USB playback.


4. Handsfree call

When a device is connected to the QUATTRO via Bluetooth, it automatically acts as a handfree speaker for calls. When a call is incoming, short press “ ⏻ ” to answer the call; Press again to end the call. Quick press twice to reject the call.

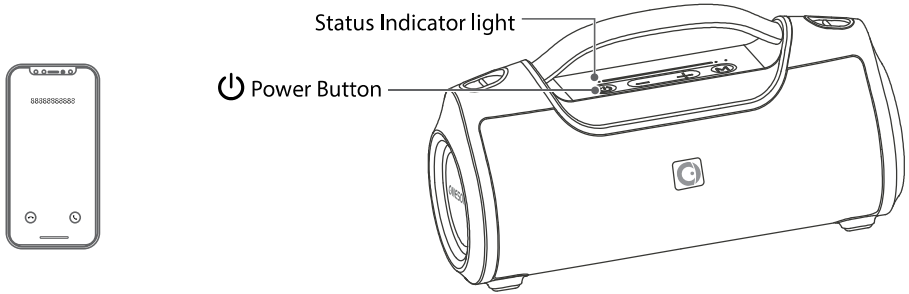

5. TWS Connection

With two “ QUATTRO ” devices, power on both devices to enter Bluetooth mode. Long press the “ M ” button on both until the TWS indicator light flashes WHITE. The devices will connect to each other automatically. After they have connected successfully, both of their TWS Indicator lights will remain WHITE. The Master model's LED Indicator light will flash BLUE, and the sub-master model's LED Indicator light will be solid BLUE. Once the speakers are connected you may connect the user's phone/audio device. After the two models successfully connected with your phone/audio device, the speakers will playback in Stereo Mode.

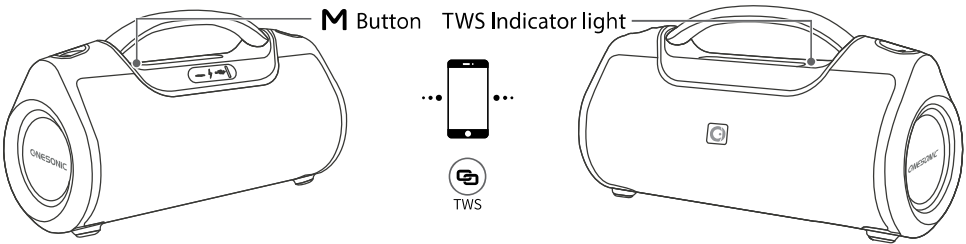


- Remark:**
1. Two speakers are needed, and both must be on Bluetooth mode.
 2. Before TWS pairing, don't pair any other device for speaker.

OPERATIONS GUIDE

6. Aux-In Mode


Use 3.5mm Aux cable to connect "QUATTRO" and device, it will switch to Aux mode automatically, the green indicator light will turn on. Then you can play music immediately.

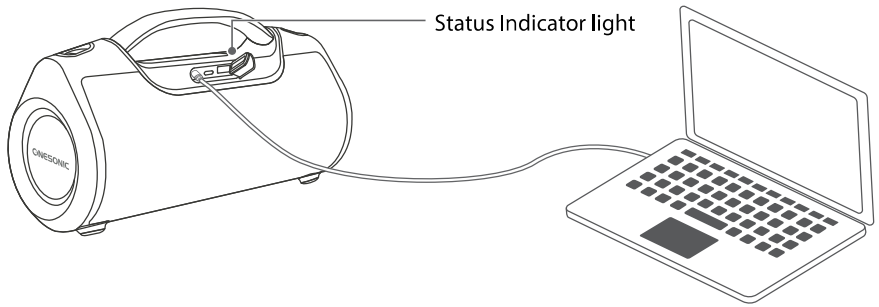

7. Charging


Important notice:

- Only use the adapter provided
 - Use 5V/2A or above 2A adapter
1. Charge the device upon hearing the low battery voice prompt.
 2. Red indicator is on when charging, and it is off after full charge.
 3. Short press the power button before using USB-A function if speaker is powered off.

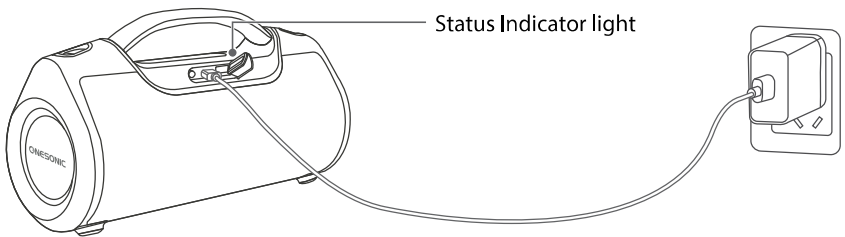

OPERATIONS GUIDE

8. Power Savings


If the device has low battery, the speaker will power off to save battery power:
On BT mode, without any connection with any device for 10 minutes;
Long press “  ” 2-3 seconds to power on after that.

9. USB Port Features


Your speaker has an integrated USB port which has two functions:

- 1) For playing music files stored on a USB drive. Simply insert a USB drive with pre-loaded mp3/audio files into your speaker’s USB port. A white LED will illuminate when in USB disk mode.
- 2) For charging smartphones and USB-powered devices. Simply insert your device’s USB charging cable into the speaker’s USB port, then short press power button to charge your device. The charging output is 2A. Please use this feature only as a last resort (if your phone’s battery is about to run out) as it will deplete the battery of the speaker thus reducing the music playback time.

FUNCTION INSTRUCTIONS

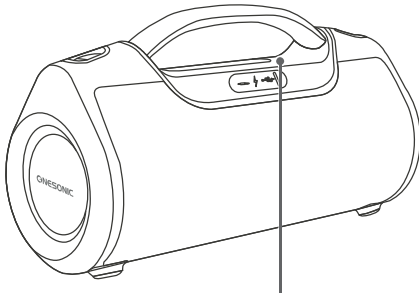

Status Indicator light

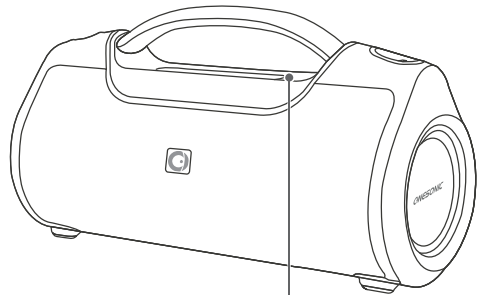

TWS Indicator light

Power on	LED Indicator will turn BLUE when power on, and enter Bluetooth mode automatically. The LED Indicator light will quickly flash BLUE when searching for Bluetooth device.
	LED Indicator will turn GREEN when connected by 3.5mm audio cable
Bluetooth mode	LED Indicator will turn BLUE when Bluetooth connected successfully
	LED Indicator will flash BLUE if your Bluetooth device is out of range or disconnected (in searching mode).
AUX mode	LED Indicator will turn GREEN when connected by 3.5mm audio cable
U Disk mode	LED Indicator light will turn WHITE
TWS mode	TWS indicator light will quick flash when it is on TWS mode TWS indicator light remains solid when connected successfully
Charging mode	LED Indicator will turn RED while charging; RED indicator light will turn off when charging is complete.
Low battery	LED Indicator will flash RED when battery is low.
Low battery power off	QUATTRO will power off automatically when battery is lower than 10%, and a voice prompt will alert you that power is off.

SPECIFICATIONS

Product Name	QUATTRO
Bluetooth Name	ONESONIC QUATTRO
Bluetooth Version	5.0
Battery Capacity	7.4V / 7200mAh
Playing Time	10~12h
Charging Time	3~4h
Speaker Unit	20Wx2 + 10Wx2 = 60W
Charging Current	5V/2A
USB-A Port	5V/2A output (max.)
Product Size	310 x 152 x 118mm
Product Weight	2164g±50

FREQUENTLY ASKED QUESTIONS

Q: What kind of charger should we use for the speaker?

A: All common USB-C chargers can be used, while we suggest the ones 5V/2A or above 2A.

Q: What if there is noise or discontinuous sound during playing?

A: The speaker can be normally used within 10m under no obstruction environment. If it is beyond 10m or with obstruction, there might be noise or discontinuous sound.

Q: Why does the speaker automatically power off after no Bluetooth connection?

A: If the QUATTRO has not paired with a device in 10 minutes,, the device will shut down automatically to reduce power consumption.

Q: Why does the speaker not connect a previously paired mobile phone?

A: First, remove the speaker's paired name from the cellphone's Bluetooth List and then restart pairing.

Q: What is the working sequence of the speaker?

A: Default mode is Bluetooth mode but when insert in AUX in cable, it will be AUX IN mode.

Q: The speaker cannot be started up in a normal situation.

A: Please plug in the charger and try in a few minutes, or long press the power button 10-30s to reset.

Notes:

1. Read this manual carefully before use.
2. For the first use, please fully charge the product.
3. Use an appropriately certified adapter that has passed national safety certification in your region.
4. If you do not use the product for a long time, be sure to charge it once within a month at least to maintain its performance.
5. Do not use this product in an extremely cold or hot environment, such as temperature beyonds the range of 5 °C-35 °C. If use it beyond the above range, the product may stop automatically to protect the internal circuit.
6. When charging it in a high temperature environment, the product may automatically stop charging to protect the battery. At this time, the charging indicator usually flashes quickly to indicate that the charging environmental temperature or the product internal temperature is too high.
7. Storage environment temperature: -5 ~ 35 °C RH < 70% (recommended 25 °C ±5).

Important safety instructions:

1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.
2. Do not use it in dusty, humid, dry, and high-temperature environments.
3. Do not place this product near a heat source, or a place with direct sunlight, a lot of dust, or mechanical vibration.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains etc., during use. Ensure there is enough space around the device for hot air to escape.
5. Do not exceed the nominal water-proof parameter when using the QUATTRO.
6. If the product is damaged, for example, the power cord or plug is damaged, liquid enters the device, or the device is subject to heavy impact, discontinue use of the device.
7. When the product is fully charged, do not leave the device connected.
8. The maximum ambient temperature should not exceed 40°C.

This speaker supports mobile phones/ tablets/ PCs etc. This User Manual relates to connecting to mobile phones.