


ONESONIC

User Manual

Wireless Speaker MEGAMAUS

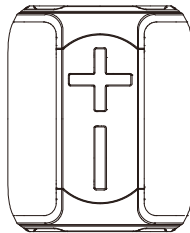


SAFETY INSTRUCTIONS

Read all instructions

Only charge with devices rated and marked with 5V to avoid damage to the speaker. Do not open up the speaker, it voids the warranty and may damage the product. Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles varies by use and settings. Never place the speaker close to high temperature heat sources. To keep the warranty valid, never try to repair the product yourself.

PARTS AND FUNCTIONS

1. Lanyard
2. + Volume up button: next song, increase the volume, decrease the volume.
3. - Volume down button: previous song, decrease the volume.
4. Bluetooth indicator
5. Power button: power on/off, switch the playing mode.
6. Pause button: play, pause, answer call, TWS.
7. AUX IN port.
8. Type-C charging port.
9. LED indicator
10. TF card slot.
11. Microphone.

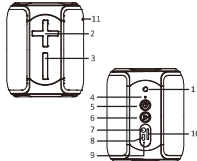

THE SPEAKER'S BATTERY

A built-in rechargeable battery powers the speaker.

CHARGING

Connect the supplied charging cable to the charge input and to a USB port on your computer or a USB charger. The charging LED is lit red during charging. The LED turns off when fully charged. It is recommended to charge for 10minutes before powering on if the speaker has not been used for 7 days. Then you can continue to use while charging.

POWER ON/OFF

Power on: Long press power button 3 seconds to power on the speaker, then the Bluetooth indicator light will come on and you can connect Bluetooth devices.
Power off: Long press power button 3 seconds to power off the speaker, and then the Bluetooth indicator light will turn off.

CONNECT THE SPEAKER

Turn on the speaker, the bluetooth indicator will flash white, on your device search for Bluetooth devices. Select the speaker from the list: it will give an indication sound when the connection is successful. The bluetooth indicator will remain solid white. Only one Bluetooth device can be connected at the same time. If you want to connect another device to the speaker, then first disconnect the current one.

DISCONNECT THE SPEAKER

When it's connected via Bluetooth: double click power button to disconnect.

RECONNECT THE SPEAKER

Some Bluetooth devices support automatic reconnection, with those devices the speaker will automatically reconnect. The speaker will not automatically reconnect on devices that do not support automatic reconnection.

When it's not connected: double click power button to connect to the last connected device.

PLAYING MODE

Short press the power button to switch different playing modes: BT, AUX, TF.

PLAY MUSIC USING MICRO SD CARD

Connect a micro SD card and power on the speaker.

LIGHT CONTROL

Press "+", "-" at the same time to control the light ON and OFF.

AUDIO CABLE CONNECTION

Power the speaker on.
Connect a 3.5 mm audio cable to the speaker and your device.

THE PAUSE BUTTON'S FUNCTIONALITY

Short Press: 1) Music playback status: play, pause function.

2) When there is an incoming call: answer the call.

3) When you're receiving the call: hang up.

Long Press: 1) When you're calling: Press 2 seconds to reject the call.

2) Press 2 seconds to enter TWS connection, once connected, press 2 seconds to disconnect TWS connection.

3) Long press for 5 seconds to clear the pairing information and return to the default volume with a beep, the speaker will automatically turn off.

Double press: When it's connected via Bluetooth to your phone: to call back the last call.

CHANGE VOLUME AND SONG

When listening to music

Increase volume: Short press on the "+" button.

Decrease volume: Short press on the "-" button.

Previous song: Long press on the "<" button.

Next song: Long press on the ">" button.

HANDS-FREE FUNCTIONALITY

1. Turn on the speaker and the bluetooth indicator will flash white.

2. Short press the pause button to answer the call on the speaker.

3. Long press the pause button on the speaker to reject an incoming call.

4. The bluetooth indicator will be solid white, only one bluetooth device can be connected at the same time.

TWS Speaker Pairing

1. To pair two MEGAMAUS speakers together, press the Pause button simultaneously on the two speakers for 2seconds.

2. To disconnect two MEGAMAUS speakers, press the Pause button simultaneously on the two speakers for 2seconds.

3. To clear all pairing information stored on the MEGAMAUS, press the Pause button for 5 seconds until the speaker automatically turns off.

RESET FUNCTIONALITY

In the rare event that the MEGAMAUS stops functioning normally, the device can be reset by pressing the reset button which is located inside the Aux In port. To do this, use a long, thin pin to reach through the Aux In port and press the reset button at the base of this port. The device is reset when you hear an audible "beep".

AUTOMATICALLY TURN OFF FUNCTIONALITY

The speaker will automatically turn off after 10 minutes when Bluetooth is not connected and no music is playing.

TECHNICAL PARAMETERS

- Model: MEGAMAUS
- Speaker: Ø45mm 40 W*2
- Charging time: 3 hours
- Input: 5.0V**1.0A
- Product Weight: 366g
- Waterproof level: IPX7
- Bluetooth: V5.0
- Built-in rechargeable battery: Li-ion, 3.7V, 2200mAh
- Playing time: 10 hours
- Product Size: 90*94*110mm
- Range: Up to 10m

PACKAGE INCLUDING

- 1pcs* Wireless speaker
- 1pcs* Product manual
- 1pcs* Type-C USB cable
- 1pcs* AUX Cable

TWS CONNECTION

- 1: Turn on both speakers
- 2: Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound. It is the primary speaker that you operated the Play/Pause-button of this speaker for pairing initially.

- 3: Release play/Pause button. It can take a few more seconds before speakers connect to each other. Check the indicator lights to distinguish L/R channel: The white light on one speaker is flashing white for every 3 seconds that should be the left channel(the primary speaker); the white light on the other speaker is solid white that should be the right channel.
- 4: Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker mode (It will only display 1 model which is both speakers combined into one).

TWS DISCONNECTION

1. Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound

FAULT AND MAINTENANCE

First fault: connection failed.

Solution:

- (1) Please check whether the multifunction indicator light flashes white. Power on your speakers if the light isn't on. Please charge the speaker if the light is still not on.
- (2) Please turn off other Bluetooth devices; if there are many Bluetooth devices present, this may result in search difficulties.
- (3) Restart wireless speaker on devices for Bluetooth search function.

Second problem: Speaker is connected but music is not playing.

Solution:

- (1) Ensure that the distance between the player and the speaker is not greater than 10m.
- (2) Ensure there is not any obstacle between the player and the speaker.
- (3) Check the playback device or whether the speaker is in a low power state.

NOTES BEFORE USE

To ensure safe operation, please follow the following rules:

1. Place the speakers in a stable position.
2. Do not drop, disassemble, open, crush, bend, puncture, burn speaker.
3. Do not put close to any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment).
4. Before wiping with a dry cloth to clean the speakers, set the power switch to the off position and unplug the power cord from the power outlet.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

TROUBLESHOOTING

The speaker does not turn on ?

Recharge your speaker.

The speaker does not turn off or does not respond ?

Reset your speaker. See Reset Functionality above.

There is no sound?

Adjust the volume.

Make sure that your Bluetooth device is within range. Ensure there is no obstacles in the way that can block/disturb the signal. Check via the device's Bluetooth connection if the speaker is connected with the device.

There is poor sound quality?

Move the device closer to the speaker or try removing obstacles between them.

Cannot connect the device with the speaker?

Disconnect other connected devices and then try again. You can force a disconnection by moving out of Bluetooth range (10 m).

In order to avoid harming the product performance, please charge your device each 3 months at least.